

Section B8 Winch Pads

Winch Pads provide a firm, flat base for fitting winches to the mast or boom. They are made from aluminium alloy and fully anodised. The pad sits on the outside of the mast or boom, with the reinforcing plate inside, fixed by means of the winch bolts.

Ordering Sizing of the Winch Pad is determined by the size of the winch base diameter (except for electric winches, for which there is one part only). The table below shows the appropriate size for Andersen Winches that are commonly used as mast or boom winches. For other winch brands, check the base diameter and choose the Winch Pad with a base diameter larger than the winch base diameter. Alternatively consult with an Allyacht Spars Australia representative.

B8.1 Winch Pads - Mast/Boom Side-Mounted

Winches are commonly mounted on the sides of the mast to manage control lines such as halyards and topping lifts, and on the sides of the boom to manage the outhaul and reefing lines. The following Winch Pads provide a flat surface to enable such winches to be mounted. Note that all Winch Pads include a reinforcing plate. For supply of halyard winches, contact Allyacht Spars Australia, the Australian distributor for Andersen Winches. For further information, refer to Section B27 or go to www.andersenwinches.com

TO SUIT ANDERSEN WINCHES		WINCH PAD DIAMETER (mm)	PART NO.
Size	Speed		
6	1	95	008.009
10	1		
16	2	112	008.018
28	2	126	008.021
12ST	1		
28ST	2		
40	2	136	008.029
46	2	146	008.031
40ST	2	152	008.038
		160	008.040
		168	008.042
		176	008.049
46ST	2	190	008.052
52ST	2	200	008.060
Electric		Customised	008.ELE



Winch Pad



Reinforcing plate



Winch Pad
with winch mounted